TIMEX®

Model T104

Alarm Clock

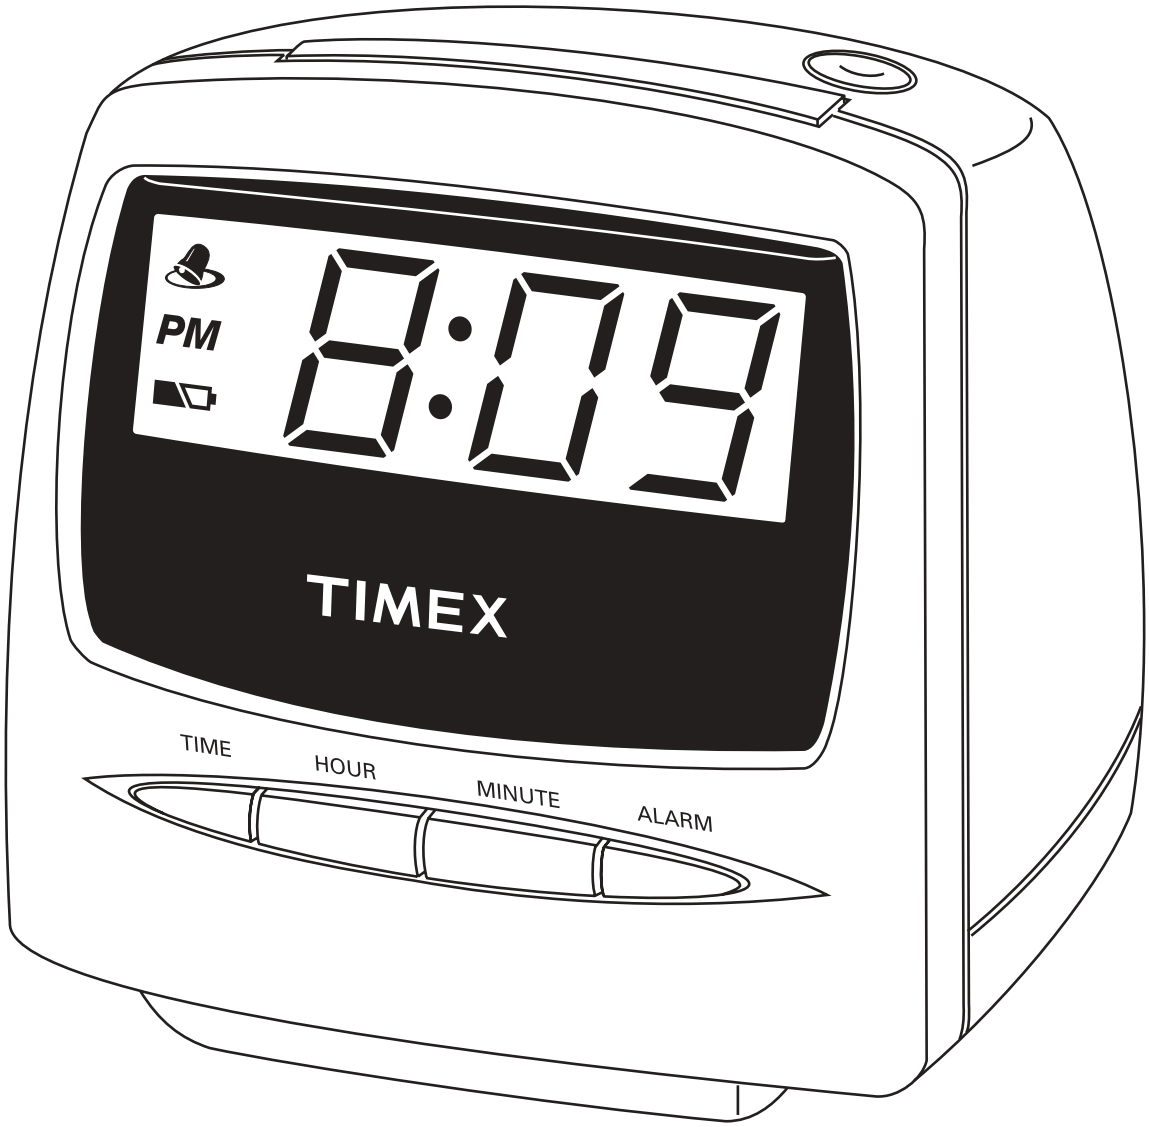

Controls and Indicators

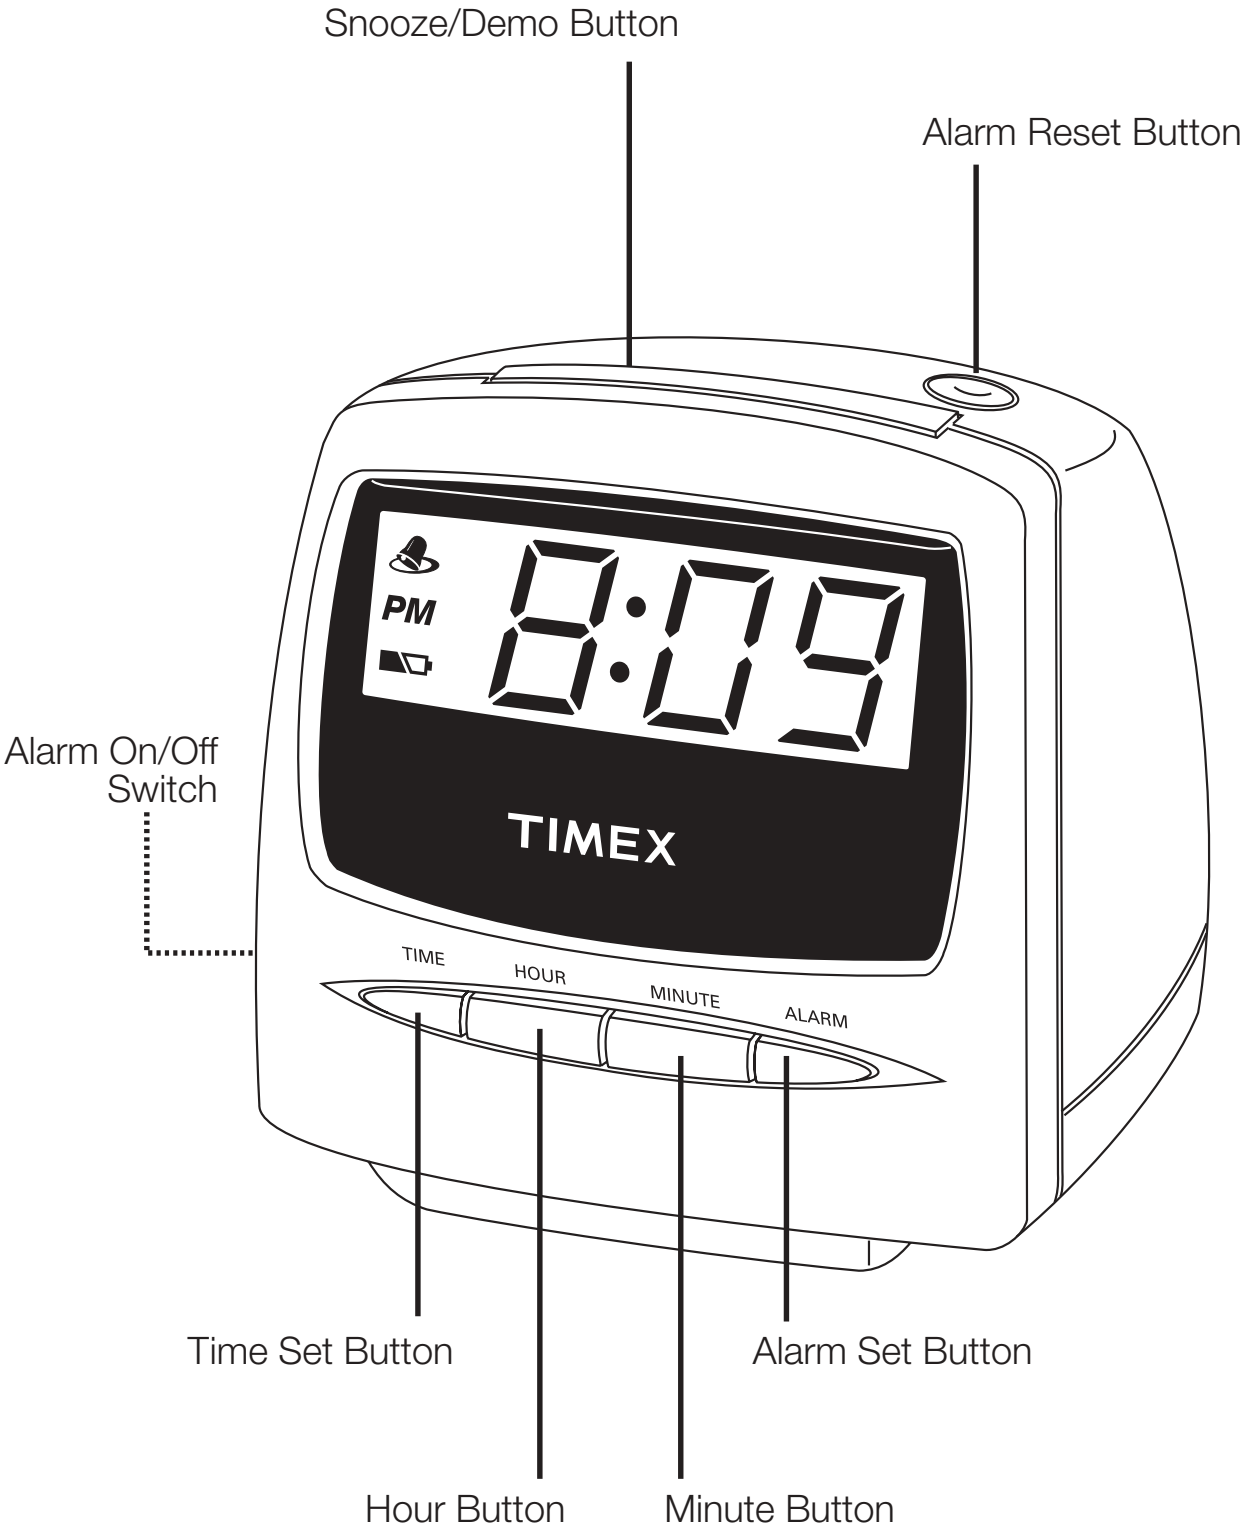

Battery Backup Installation

Installation

Important: Pull out the demo-battery pack before plugging in the unit.

Note: After installing the battery backup and reading through the Maintenance section, plug the AC line cord correctly into a wall outlet. When the unit is connected to AC power for the first time the display may blink.

Battery Backup

If the battery backup has been installed and there is a power interruption, the display will not remain lit, but the current time and alarm time settings will be temporarily maintained. If the battery backup has not been installed or is dead, when the AC power resumes the display will flash, and you must reset the time and alarm time settings.

1. Turn the unit over and slide open the battery compartment door.
2. Install a 9 volt battery correctly to the battery snaps (alkaline is recommended for longer life).
3. Put the battery compartment door back on and slide into place.

Battery Low Indicator

The **Battery Low Icon** is located in the lower left corner of the display. When the icon lights up it is time to replace the 9 volt battery.

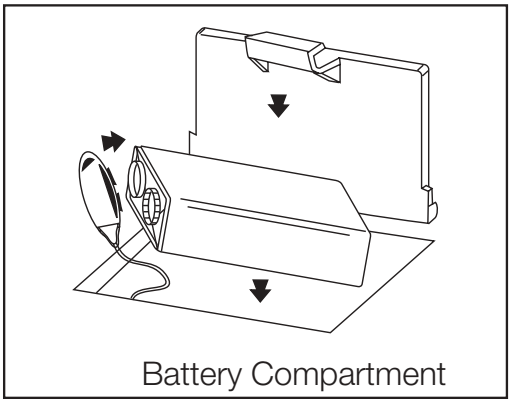

Battery Compartment

Turning Off the Alarm

1. After the alarm sounds, press the **Alarm Reset** button to turn off the alarm. The alarm will be set to turn on again at the same time the following day.
2. If you do not wish the alarm to turn on again the following day, set the **Alarm On/Off** switch to OFF.
3. If the alarm is not turned off after it sounds, it will play for approximately 1 hour then turn off automatically. This cycle will repeat every 24 hours unless the controls are changed.

Note: This unit is equipped with a “Gentle Wake” alarm system. When the alarm sounds, it will begin at a low level and gradually become louder until you’ve turned it Off, or it has reached it’s maximum volume level.

Snooze Operation

- If you press the **Snooze/Demo** button after the alarm sounds, the alarm will turn off for approximately 9 minutes. You can repeat this several times during the 1 hour alarm cycle.
- Press and hold the **Snooze/Demo** button for about 3 seconds, the unit will play a demo of all the available sounds.

Preview Alarm Sounds

You can preview your selecte d “wake to” alarm sound by pressing the **Alarm Reset** button when the **Alarm On/Off** switch is On.

Maintenance

- Place the unit on a level surface, away from direct sunlight, or excessive heat.
- Protect your furniture when placing the unit on a natural oil or lacquered finish. A cloth or other protective material should be placed between the unit and the furniture.
- Clean your unit with a soft cloth moistened with mild soap and water. Stronger cleaning agents can mar the surface of the case.

Setting the Clock Time

1. Press and hold the **Time Set** button, then press the **Hour** button until the correct hour is displayed. **Remember** to set the correct AM or PM. The **PM Icon** will light up on the left side of the display.
2. Press and hold the **Time Set** button, then press the **Minute** button until the correct time is displayed.

Setting the Alarm Time

1. Press and hold the **Alarm Set** button, then press the **Hour** button until the correct alarm hour is displayed. **Remember** to set the correct AM or PM. The **PM Icon** will light up on the left side of the display.
2. Press and hold the **Alarm Set** button, then press the **Minute** button until the correct alarm time is displayed.

Wake to Unique Sounds

1. Set the alarm as indicated in *Setting the Alarm Time*.
2. Set the **Alarm Sounds** switch to the sound you wish to wake to.
3. Set the **Alarm On/Off** switch to On. The **Alarm Icon** will light up in the upper left corner of the display.

CAUTION

RISK OF ELECTRIC SHOCK.
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

The lightning flash with arrowhead in an equilateral triangle is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The symbols above are located at the bottom of the cabinet.

CAUTION: To prevent electric shock, do not use this (Polarized) plug with an extension cord receptacle, or other outlets unless the blades can be fully inserted to prevent blade exposure.

ATTENTION: Pour prévenir les chocs électriques ne pas utiliser cette fiche polarisée avec un prolongateur. Une prise de courant, ou une autre sortie de courant sauf si les lames peuvent étre insérées à fond sans en laisser aucune partie à decouvert.

This device complies with part 15 of the Federal Communications Commission Rules. Operation is subject to the condition that this device does not cause harmful interference.

Note: The manufacturer is not responsible for any radio or TV interference cause by unauthorized modifications to this equipment. Such modification could void the user's authority to operate the equipment.

A Consumer Guide to Product Safety

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and printed on the product.

1. **Water and Moisture —** The unit should be kept dry and away from water or other liquids. If liquid is spilled on the unit, or if the unit should fall or be accidentally placed in or on a wet or damp area, immediately unplug the unit.
2. **Ventilation —** The unit should be set up in an area and position that does not interfere with its proper ventilation. Check to see where the ventilation opening is on the product. Do not set up the unit on a bed, sofa, rug, or similar surface that may block the opening. Do not keep the unit in a tight-fitting installation, such as a bookcase or cabinet, which impedes the flow of air through the ventilation openings.
3. **Heat —** The unit should be situated away from heat sources such as radiators, space heaters, stoves, or other appliances (including amplifiers) that produce or emit heat.
4. **Power Sources —** The unit should be connected to a power supply only of the type described in the operating instructions, or as marked on the appliance.
5. **Grounding or Polarization —** This unit is equipped with a two-pronged, polarized alternating-current line plug (a plug having one blade wider than the other). This plug only fits into your power outlet in one direction. This is a safety feature. If you are having difficulty inserting the plug fully into your outlet, try reversing the plug blades; do not force the plug into the outlet. If you are still having difficulty, contact your electrician to replace your obsolete outlet.
6. **Power-Supply Cord Protection —** Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to areas at the outlet and where they exit from the unit.
7. **Overloading —** Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
8. **Cleaning —** The unit should be cleaned only as recommended by the manufacturer. See the Maintenance section of this manual for cleaning instructions.
9. **Periods of Nonuse —** If the unit is to be left unused for an extensive period of time, such as longer than a month, the power cord should be unplugged from the outlet.
10. **Object and Liquid Entry —** Care should be taken so that objects do not fall and/or liquids do not spill into any openings or vents located on the product.
12. **Attachments —** Do not use attachments not recommended by the product manufacturer.
13. **Damage Requiring Service —** The appliance should be serviced by qualified service personnel when:
    A. the power-supply cord or plug has been damaged.
    B. objects have fallen and/or liquid has been spilled into openings or vents.
    C. the unit has been exposed to rain.
    D. the unit has been dropped or the enclosure damaged.
    E. the unit exhibits a marked change in performance or does not operate normally.
14. **Antenna —** The user should not connect an external antenna to the unit.
15. **Servicing —** The user should not attempt to service the unit beyond those methods described in the operating instructions. Any servicing not covered in the instructions should be left to qualified service personnel. Please also see the Warranty Information for more information on product servicing.

This device complies with Part 15 of the Federal Communications Commission Rules. Operation is subject to the condition that the device does not cause harmful interference.

Limited 90-Day Warranty Information

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a $3.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service after the warranty period or without proof of purchase is $6.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of Soundesign, for the sum of $3.00 (or $6.00 if after the warranty period or without proof of purchase).
4. Send the unit prepaid to the Factory Service Center listed below:

Consumer Repair Department
SDI Technologies Inc.
Timex Audio Products Division
1401 Pullman Drive, Suite A
El Paso, TX 79936-7726

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and SDI Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For questions or comments regarding this or other products, please call our toll-free number: 1-800-888-4491.

TIMEX is a registered trademark of Timex Corporation in the United States and other countries.

T104-100302 *Printed in China*